



SECUMAX 150




USAGE

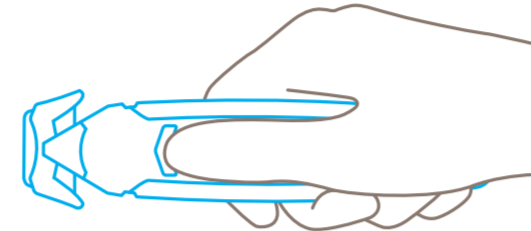


For the best possible grip, place your thumb on the **grooved surface**.

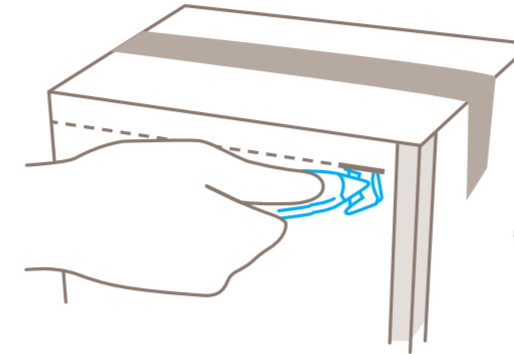

Pierce into the cutting material using either side of the cutter head.

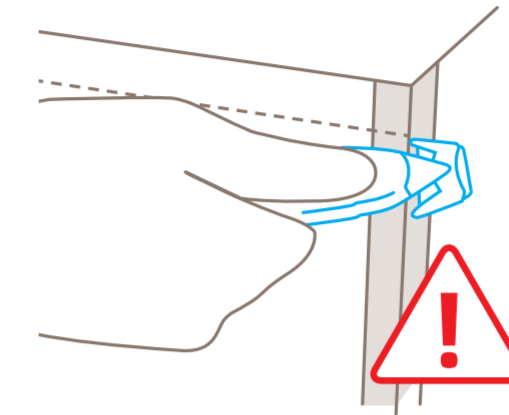


Do not lever against staples, nor force into edge protectors!

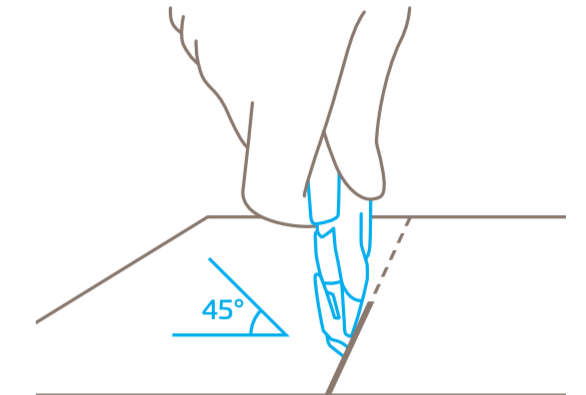


Hold the cutter at a **slight angle** when cutting open cardboard boxes.


USAGE

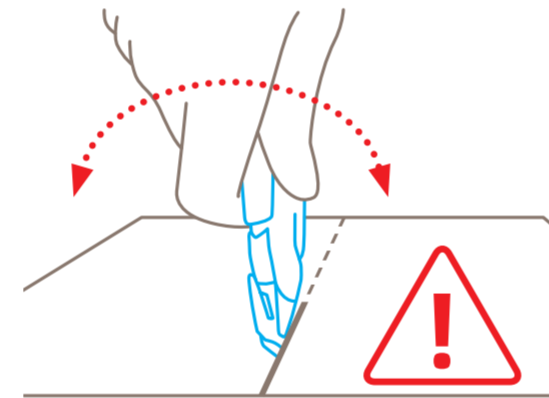


If the blade head becomes stuck, **don't forcefully lever** the cutter!

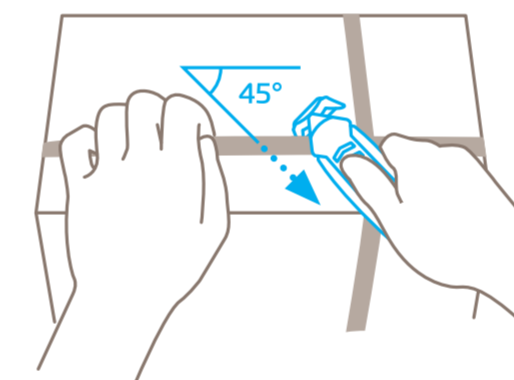

For best results, cut plastic strapping band **diagonally** (at a 45° angle).

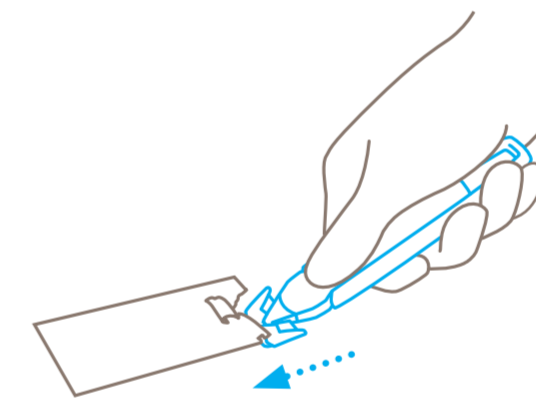


Use the small scraper at the head of the cutter for **light scraping work**: e.g. to remove labels.

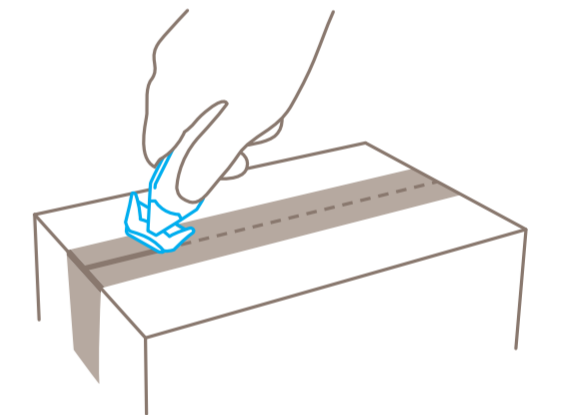


Open cardboard boxes that have been taped closed by using either side of the scraper as a **tape splitter**.

PROTECTION OF USER

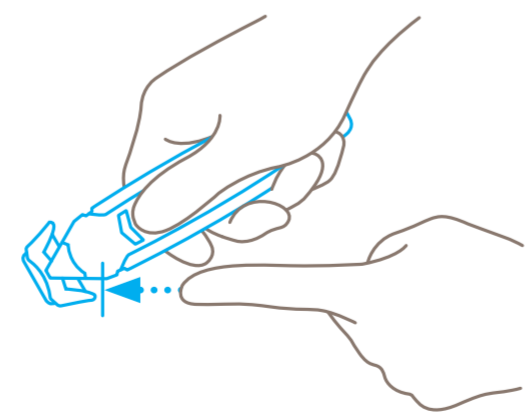


The concealed blade provides maximum protection from **cut injuries**.

PROTECTION OF GOODS

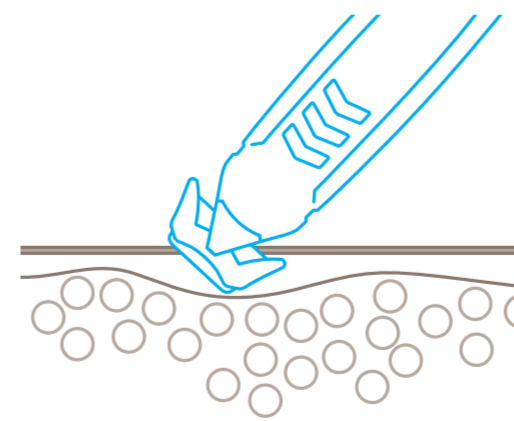

The concealed blade **won't come into contact with your goods** either.

DISPOSAL

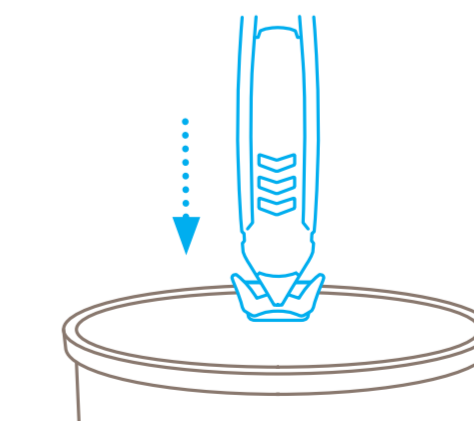

The SECUMAX 150 is a throw-away cutter that can be safely disposed of **with your general waste**.

Please note: to ensure your product always functions flawlessly, regularly remove any build-up of cutting material.